perma NOVA

Installation Guide







1. Basic guidelines

Page 3



2. Mounting types

Page 4 - 6

- Direct mounting
- Remote mounting with tube / hose
- Mounting of oil filled units



3. Preparation of lubrication point

Page 7 - 8



4. Pressure testing

Page 9 - 10

Pressure test procedure



5. Activation and installation

Page 11



${\bf 6.\ Identification\ of\ lubrication\ system}$

Page 11

© 2024 perma-tec GmbH & Co. KG

The content of this document has been compiled by perma-tec with meticulous care. Nevertheless, we cannot rule out deviations and reserve the right to make technical changes to the product without any advance notice. We do not assume any judicial responsibility or liability for any damages which may ensue as a result. Necessary modifications will be included in subsequent editions.

Compiled and printed: 01|2024

This installation guide provides instructions for the installation of perma NOVA and helps in preventing basic mounting errors. The guide should be used with the operating instructions.

Drawings are only examples. There are many other possibilities for mounting, depending on local conditions.

Disclaimers of corresponding operating instructions apply.

Installation guides do not affect validation of the operating instructions.

Basic guidelines


- perma NOVA is a single-point lubrication system. You must use a separate lubrication system for each lubrication point.
- The connection thread of perma NOVA is BSP R1/4 male thread.
- Replace the application's grease fitting with a suitable reducer, perma offers a wide assortment of reducers, extensions, tubes / hoses, brackets and other accessories. See our product catalogue for the entire overview on perma accessories.
- Ensure that the lube po int is prefilled with fresh lubricant before installation, perma offers all of its lubricants in 400 g cartridges for grease guns.
- Select the right lubricant for your application. perma offers a wide variety of standard lubricants for different applications. See our product catalogue for further information.
- All metal to metal connections must be glued together with Loctite® 243™.
- Fill grease lines and accessories with the same lubricant that is contained in the lubrication system.
- For managing serveral lubrication points we recommend the use of a lubrication maintenance plan. You can use the free perma CONNECT software for online administration.
- Information about the selection of suitable lubricants can be found in our product catalogue. Selection is also possible via the perma SELECT APP. This free software helps you find the most suitable lubrication system, the ideal lubricant and the right discharge period.

Visit our webpage www.perma-tec.com for further	
information about perma products	首號

Mounting types

Direct mounting

Direct mounting should be preferred for all lubrication points, to protect the lubrication system against high pressure.

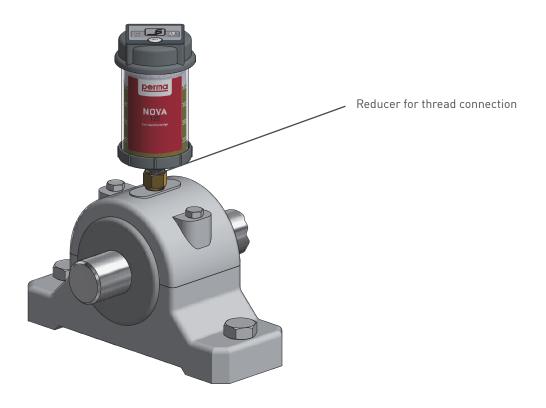

Indoors, perma NOVA can be installed in any mounting position. Outdoors or in moist areas, mounting position must be vertical (outlet pointing down) or horizontal!



^{*}This position is only possible in dry environments

Remote mounting with tube / hose

Remote mounting is recommended if,

- the ambient temperature of the lubrication point is permanently higher than +60 $^{\circ}$ C
- the lubrication point is exposed to high vibrations
- no direct access to lubrication point is possible due to safety issues (e. g. removal of protective screens, safety walls or cages)
- it is difficult or dangerous to access the lubrication point
- the lubrication system is exposed to mechanical forces (e. g. falling rocks)



- Keep connection lines as short as possible and use tubes / hoses with an inside diameter of at least 6 mm. Keep in mind that tube / hose length and bore diameter of bearing housings affect pressure and discharge period of the lubrication system.
- For installation of perma NOVA use Mounting bracket 1-point G1/4 female (109685).
- Secure tubes / hoses with suitable fastenings (brackets, cable ties) to protect against damage and tearing.
- Depending on lubricant and ambient temperature, different tube / hose lengths are possible, e. g.


→ perma MULTI LC 150-2 (SF01): 2 m (+20 °C) \rightarrow perma MULTI 100 (S032): 3 m (+20 °C).

Mounting of oil filled units




Direct mounting

All oil filled perma NOVA come with an integrated oil retaining valve. They can be installed directly on a lubrication brush without the need for an additional oil valve.

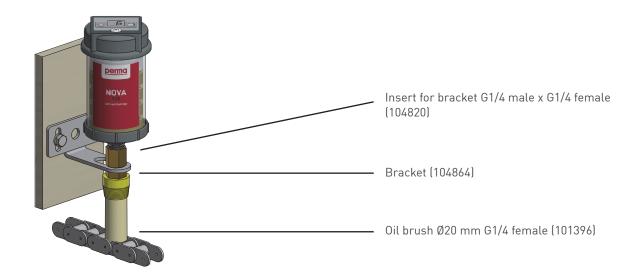


Remote mounting

Remote installations of oil filled perma NOVA require an oil retaining valve at the lowest point of the application. This will prevent oil leakage from the lubrication system.

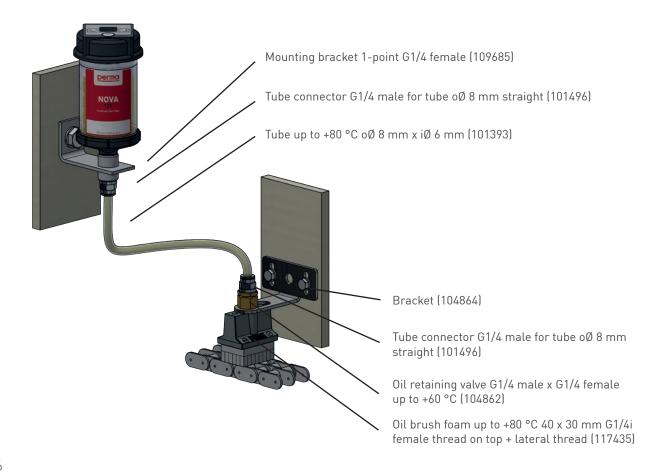


Preparation of lubrication point

1. Prior to installation, lubrication point must be cleaned to protect against contamination.

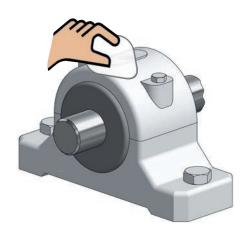


2. Remove grease nipple or plug screw of connecting thread and check thread size.

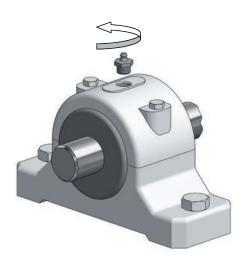




3. Insert reducer and install tube / hose and necessary accessory parts.

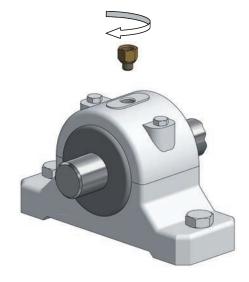

4. Lubrication point, accessory parts and tubes / hoses must be pre-filled with lubricant. This enables the lubricant to immediately reach the lubrication point.

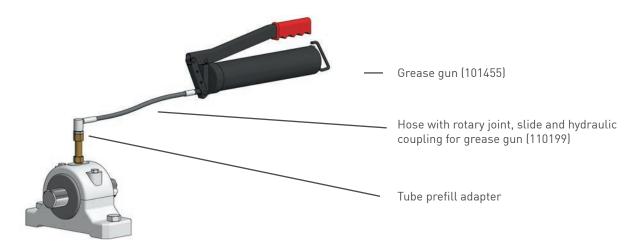

5. Prefill lubrication point and all grease lines for remote installation.




6. Use a tube prefill adapter to prefill lubrication point and grease lines: KIT TUBE PREFILL ADAPTERS (117907)

Pressure testing

Check counter pressure at lubrication point before installing the lubrication system to guarantee correct function.

Most bearings require 0.5 - 2 bar pressure (without extension tubes / hoses). perma NOVA can be used for these lubrication points.

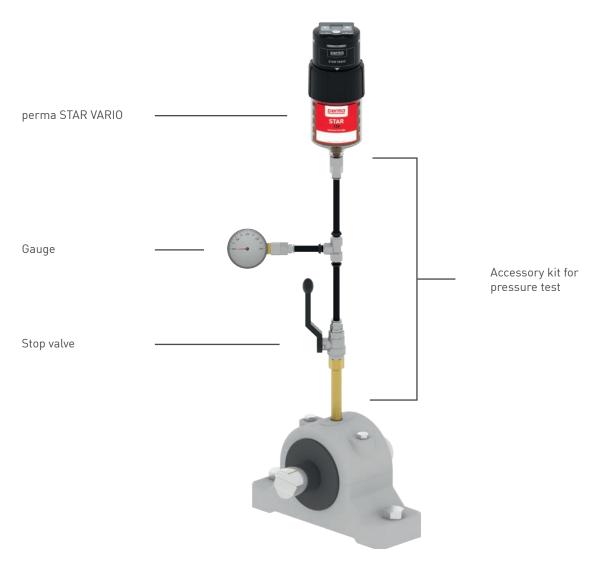

For pressure testing please use perma STAR VARIO with Accessory kit for pressure test (101480).

Be sure to use the same lubricant for both, prefilling and LC of perma STAR VARIO.



Accessory kit for pressure test (101480) (order lubrication system separately)

Pressure test procedure

- 1. Remove grease nipple.
- 2. Screw reducer onto lube point and connect pressure testing kit.
- 3. Connect perma STAR VARIO to the open outlet.
- 4. Turn machines on to ensure that lube point is in use and measuring of corresponding counter pressure is possible (Caution: Observe accident prevention regulations).
- 5. Open stop valve.
- 6. Push SET button on perma STAR VARIO for approx. 10 seconds until PU lights up on display to trigger an additional discharge / purge.
- 7. Watch the pressure on the gauge during the additional discharge. If pressure exceeds 7.5 bar the lubrication system will shut off automatically.
- 8. If pressure doesn't rise any more during the additional discharge, max injection pressure has been reached. In order to find out the required system pressure you must wait another 5 minutes.

 The gauge will then show the system pressure.
- 9. If system pressure exceeds 2 bar you need to "purge" the lube point by using a mechanical grease gun. Proceed with steps 6 and 7.



10. If counter pressure doesn't decrease you need to either select a different lubricant or a different lubrication system. Please ask perma-tec to assist you in this matter.

Activation and installation

Start up as following (also refer to operating instructions):

- 1. Remove LC protection cap
- 2. Attach drive unit. Screw on tight until the edge on the control unit is lined up with the arrow on the LC unit
- 3. Push SET button to select desired discharge period. Discharge period can be set from 1 to 12 months in monthly steps
- 4. Note activation / exchange date on label
- 5. Remove plug and screw lubricator into lube point



Identification of lubrication system

The label of the lubrication system shows product-code, manufacturing date, traceability number, lubricant code and article number.



Installation date and exchange date (to be added by operator)

Art. No. | Serial number (product designation - year / week of manufacture - internal no.) Lubricant designation



perma-tec GmbH & Co. KG

Hammelburger Str. 21 97717 Euerdorf GERMANY

Tel.: +49 9704 609 - 0 info@perma-tec.com www.perma-tec.com